


Troubleshooting

Lack of Pressure


- A. Check oil level
- B. Check upper and lower check valves

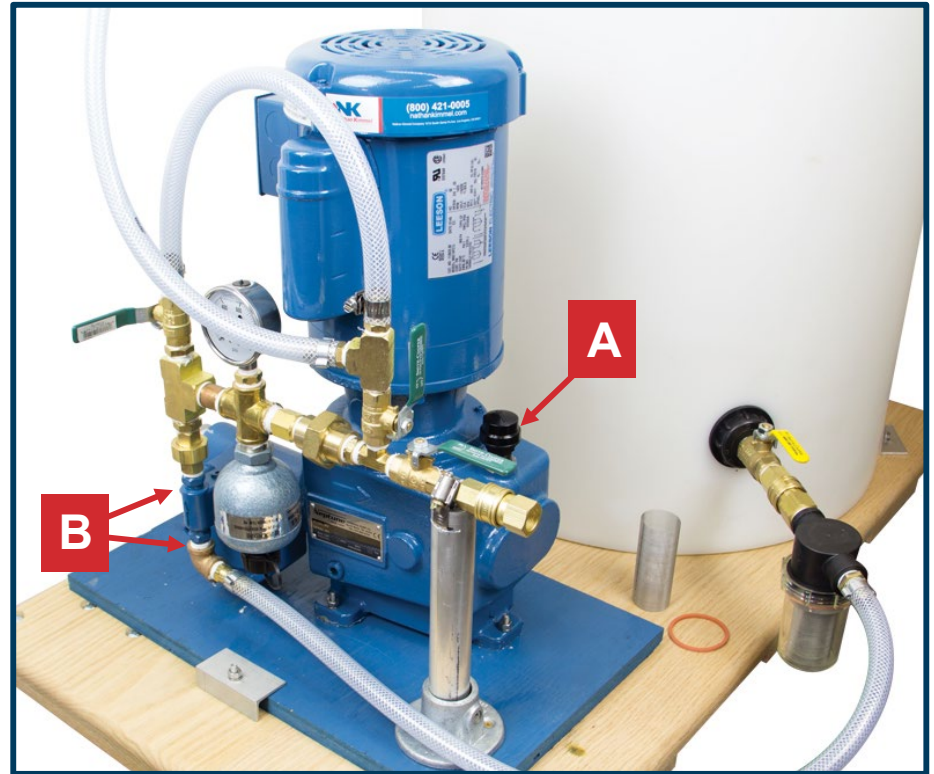

Troubleshooting

Alum Not Flowing

- A. Check oil level
- B. Check check valves
- C. Ensure shut off valve on tank is open
- D. Check PVC filter

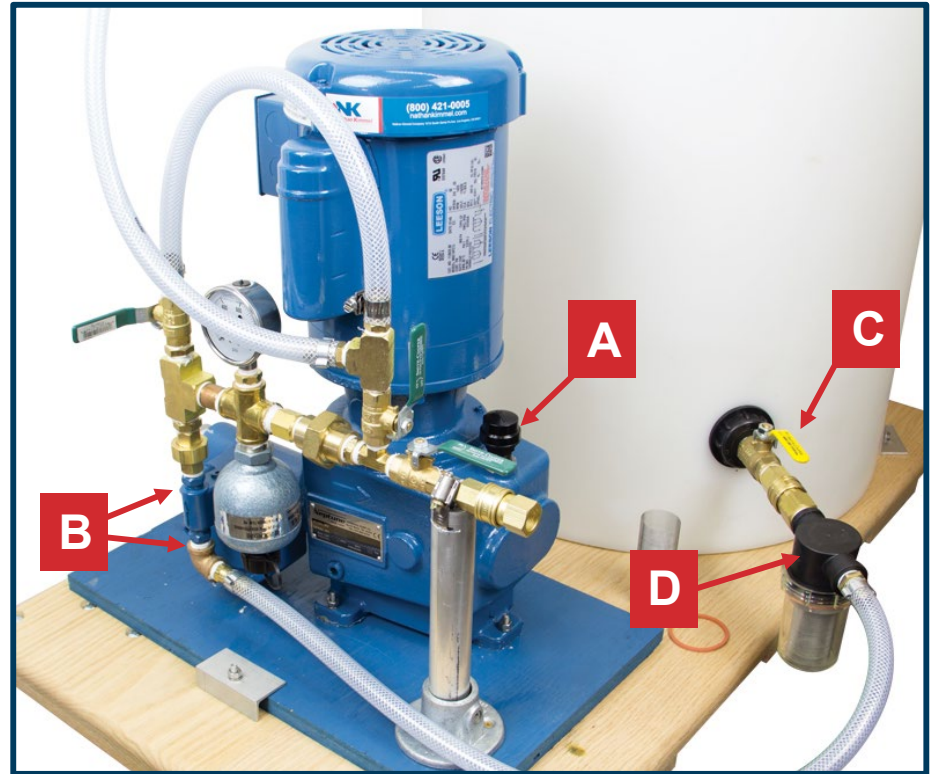

Troubleshooting

Alum Surging

- A. Check pulsation dampener



